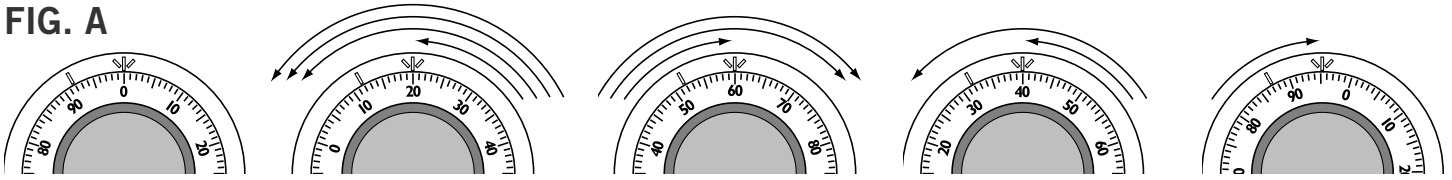
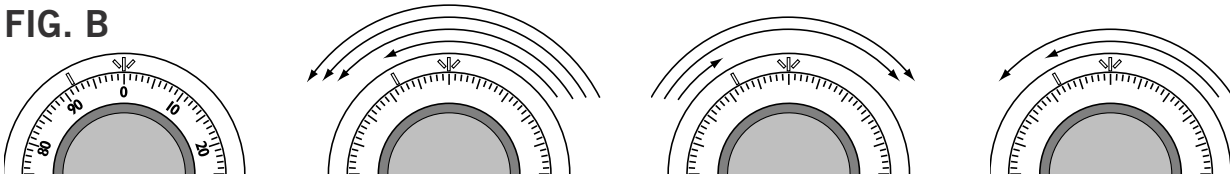


FIG. A**FIG. B**

Operating Instructions for 6600 or 6700 series three-number combination lock

Important: Turn dial slowly and evenly. Do not turn back to regain alignment if you rotate past the number. If an error is made, re-dial entire combination. Do not count turns. Count how many times each number is aligned with the opening index, (the mark at the 12 o'clock position).

To Open: (Refer to Figure A)


- Step 1:** Turn dial left, aligning first number with the opening index the fourth time it comes to the opening index.
- Step 2:** Turn dial right, aligning second number with the opening index the third time it comes to the opening index.
- Step 3:** Turn dial left, aligning third number with the opening index the second time it comes to the opening index.
- Step 4:** Turn dial right until dial comes to a complete stop.
- Step 5:** To relock and secure the combination lock, turn the dial to the left at least four complete revolutions.

Changing Instructions for 6600/6700 series three number combination lock

Important: You must have the correct change key. Do not set the third number of the combination between 0 and 20 on a lock using a dial spindle splined at 50. Do not set the third number of the combination between 90 and 99 or 0 and 10 on a lock using a dial spindle splined at 41. Do not set adjacent numbers of the combination within five numbers of each other. Do not use strictly ascending (ex. 22-45-83) or descending (ex. 83-45-22) number sequences. Do not use combination numbers that will be easy for someone to guess. Do not use combination numbers that all end in 0 or 5. Do not remove lock cover. If an error is made, re-dial the entire combination.

To Change: (Refer to Figure B)

- Step 1:** Using the existing combination on the opening index, unlock combination lock, and open safe door. Re-lock lock with safe door open.
- Step 2:** Dial the existing combination again, using the changing index, (the mark at the 11 o'clock position). Keep the third number aligned on the changing index.
- Step 3:** (Refer to Figure C) Insert change key into key hole on the lock's cover. Change key must be completely inserted.
- Step 4:** Rotate key left (counterclockwise) 90 degrees.
- Step 5:** Enter a new three number combination using the changing index, dialing as follows:
 - Turn dial left until the first new number aligns with the changing index the fourth time.
 - Turn dial right until the second new number aligns with the changing index the third time.
 - Turn dial left until the third new number aligns with the changing index the second time.
 - Turn the dial right ten numbers.
- Step 6:** Hold the dial steady, and rotate change key right 90 degrees until it stops. Remove change key.
- Step 7:** Using the opening index, check new combination at least three times.

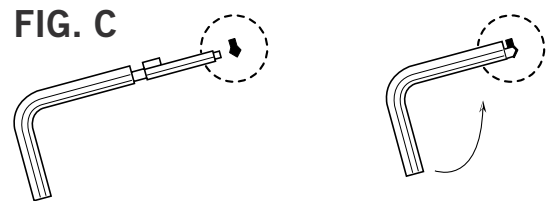FIG. C

After changing the opening code, the lock should be opened and locked several times with the safe door open.

Important: Do not select codes such as birthdays or other predictable data which could give a correlation between the user and the opening code.

Sargent & Greenleaf, Inc.

One Security Drive, Nicholasville, Kentucky 40356
Phone (859) 885-9411 FAX (859) 887-2057
Internet: www.sargentandgreenleaf.com



Sargent & Greenleaf S.A.

9, chemin du Croset, 1024 Ecublens, Switzerland
Phone 41-21-691-9583 FAX 41-21-691-5349
catalog revision 7/7/03